

Features

- Playback of audio and video files from USB-media up to 2TB
- NTFS and FAT32 multi partition capable
- Support of all common Audio & Video formats (e.g. MP3, AVI, VOB, MOV, RMVB, JPG, FLV, MKV, H.264)
- Last position memory
- Controllable by IR-sensor and remote control
- Visualization via ON-Screen display
- Search in Audio + Video files during playback possible
- Scroll page by page possible in Audio + Video files

Parts Included



Installation Instructions**Audio-Video output**

Cable colour	Assignment
● Yellow	Video signal
● Red	Audio signal right
● White	Audio signal left


Connection for power supply

Cable colour	Assignment
● black	Ground
● red	+12V Constant
● pink	ACC
● blue	Cable for connection of IR-control cable

Remote control battery installation

Before attempting to operate your remote control, install the battery as described below.

1. Turn the remote control face down.
2. Twist the battery cover with a coin to open.
3. Put battery in making sure of the right polarity.

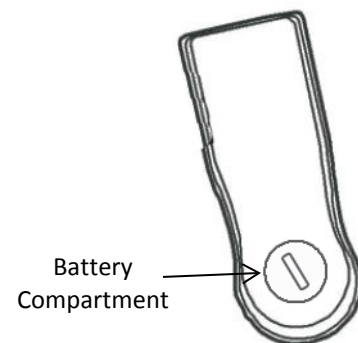

Operation



Remote control operations

Button	Function
POWER	Select power-on or stand-by
1,2,3-0	No function
MUTE	Mute control
SOURCE	No function
PREVIEW	No function
AUDIO	No function
RECALL	No function
ENTER	Select the highlighted item
INFO	Select OSD menu (only in menu Movie/Photo)
▲	Up (+ previous file in menu Movie/Music/Photo)
◀	Left (+ scroll page by page in menu Movie/Music/Photo)
▶	Right (+ scroll page by page in menu Movie/Music/Photo)
▼	Down (+ next file in menu Movie/Music/Photo)
OK	Select the highlighted item
HOME	Select main menu
EPG	No function
MANUAL	No function
AUTO SCAN	No function
EXIT	One level back
MENU	Select Options menu (only in menu Movie/Music/Photo)
◀◀	Fast backward
⏸	Select play or pause
▶▶	Fast forward
REC	Delete file (in menu Music); Subtitle (in menu Movie)
REPLAY	Activate/deactivate repeat (only in menu Movie/Photo)
TTX	No function
F1	Previous file (only in menu Movie/Music/Photo)
F2	Volume down
F3	Volume up
F4	Next file (only in menu Movie/Music/Photo)




System Setting Menu

 In the “System Setting” menu you can configure the settings. You can use [▲] and [▼] buttons to highlight the item, you can use [◀] and [▶] buttons to change the adjustment and press [OK] to set the setting. Leave out the menu by pressing the [EXIT] button.

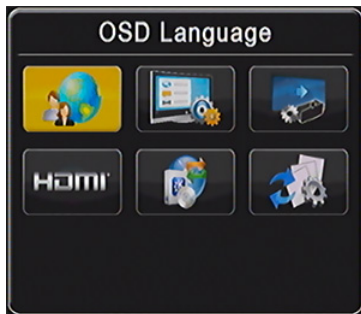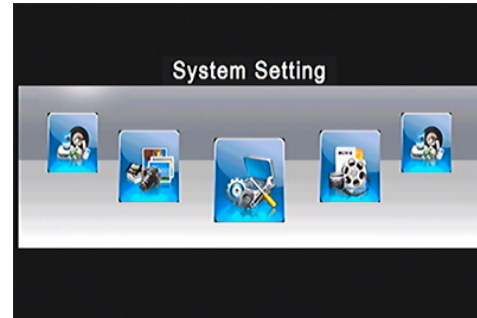

OSD Language

 Select language. Choose between English and German and 24 more languages.

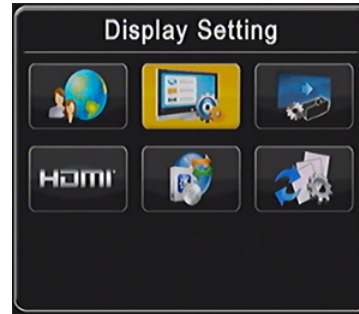


Display Setting

Select display settings. Choose between e.g. output resolution, hue, saturation, TV-system: PAL/NTSC.




Monitor Port Setting

 No function.

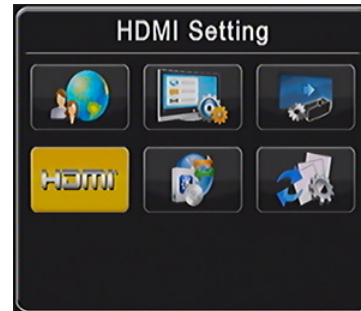


HDMI

No function.

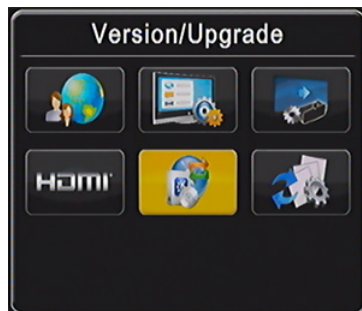

Version/Upgrade

 Display of the hardware and software version.


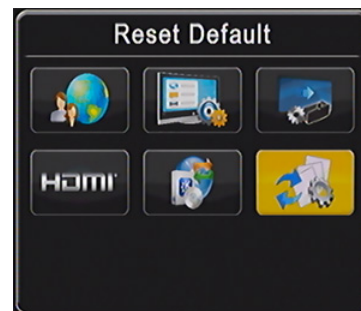


Reset Default

Reset of the factory settings.



 Movie Menu

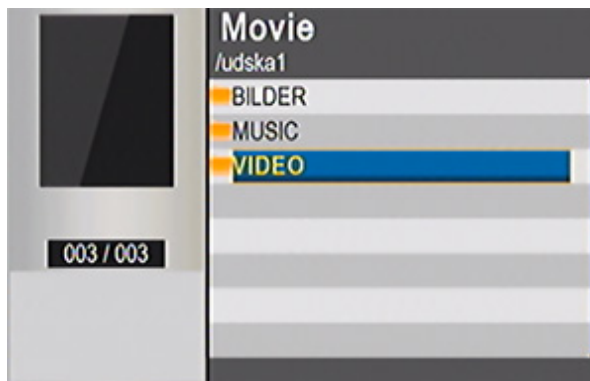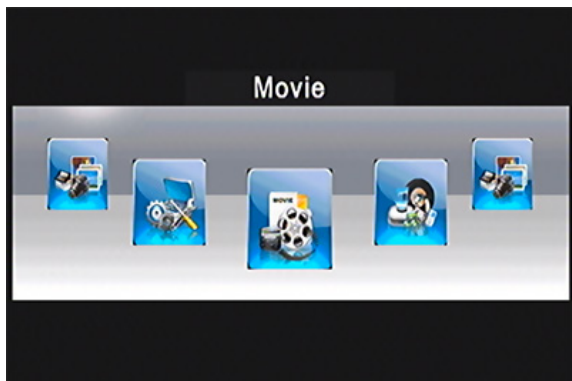


1. In menu mode, select "Movie".
2. Press [OK] button to show all of the stored movie files.
3. Press [▲] and [▼] buttons to select a movie file and press the [OK] button to start the movie file.
4. Press [▶||] button to pause or start.
5. Press the [HOME] button to leave out the menu item.



Press [MENU] button while the movie is playing to get an Options menu on the display. Some settings can be changed, e.g. playing mode, repeat mode, and equalizer. Press [MENU] button again to remove the OSD menu.



Press [INFO] button while the movie is playing to get an OSD menu on the display with information to the stored movie. Press [INFO] button again to remove the OSD menu.

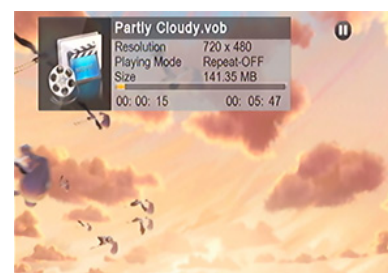

Music Menu

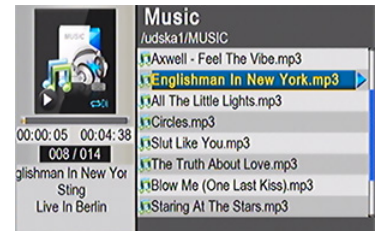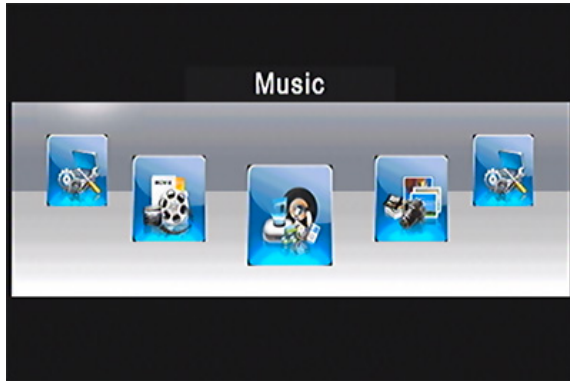


1. In menu mode, select "Music".
2. Press [OK] button to show all of the stored music files.
3. Press [▲] and [▼] buttons to select a movie file and press the [OK] button to start the music file.
4. Press [▶||] button to pause or start.
5. Press the [HOME] button to leave out the menu item.

Press [MENU] button while the music is playing to get an Options menu on the display. Some settings can be changed, e.g. playing mode, repeat mode, and equalizer. Press [MENU] button again to remove the OSD menu.



Photo Menu

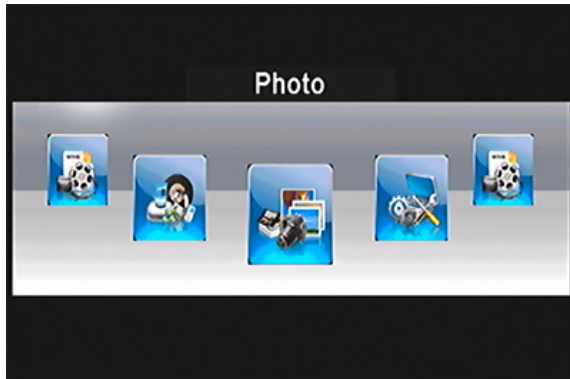

1. In menu mode, select "Photo".
2. Press [OK] button to show all of the stored photos.
3. Press [▲] and [▼] buttons to select a photo and press the [OK] button to display it. Slideshow will start automatically.
4. Press [▶||] button to pause or start.
5. Press the [HOME] button to leave out the menu item.

Press [MENU] button while watching photos to get an Options menu on the display. Some settings can be changed, e.g. playing mode, repeat mode, and slideshow time. Press [MENU] button again to remove the OSD menu.



Press [INFO] button while watching photos to get an OSD menu on the display with information to the stored photo. Press [INFO] button again to remove the OSD menu.

Specifications

Operation voltage	10.5 – 14.8V
Stand-by power drain	<1mA
Operation power drain	<1000mA
Power consumption	<13W
Temperature range	-30°C to +80°C
Weight	295g
Dimensions (box only) W x H x D	140 x 30 x 105 mm

