

PRODUCT FEATURES:

- Replaces factory trunk handle.
- Selectable Parking Guide Line ON or OFF.
- Maintains the OEM look.


PARTS INCLUDED:

1. Trunk handle camera
2. 20" extension cable



INSTALLATION INSTRUCTIONS:

1. Carefully remove the factory trunk handle using a plastic panel removal tool.
2. Run the camera cable to the inside of the cabin towards the radio.
3. Make the power and video connections to the RVC interface or the aftermarket radio.
4. Test the camera for functionality.
5. Snap in the new trunk handle.

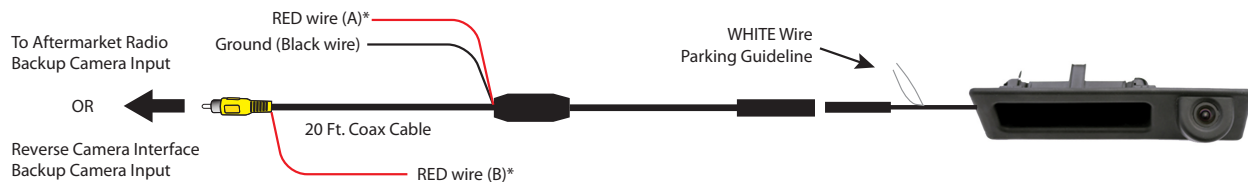

***NOTE:** The camera needs a +12V trigger. Power the camera at the headunit using RED Wire B or from the reverse light wire using RED Wire A. **DO NOT** connect both wires to +12V at the same time. Insulate the red wire that is not being used. Tap the Black wire to an existing ground lead, or ground Black wire securely to vehicle body metal.

Loop Wire Color	Function	Joined	Cut
White	Parking Lines	ON (default)	OFF

VEHICLE APPLICATIONS:

2012-2018	4 Series	2014-2017	X3
2012-2014	7 Series	2014-2018	X5
2016-2017	X1	2015-2017	X6

