

PRODUCT FEATURES:

- Replaces the factory third brake light to maintains the OEM look.
- LED brake lights included.
- 6 Infra Red LEDs for night time use.
- With built-in microphone.
- Uses 4-pin aviation type water resistant connectors.


PARTS INCLUDED:



CCV-01X Camera



10M Extension Cable

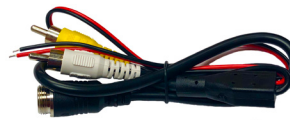


4-Pin to RCA Adapter



Brake Light Power Cable

INSTALLATION INSTRUCTIONS:

1. Remove the factory third brake light.
2. Plug the 4-pin aviation connector of the extension cable to the camera cable.
3. Connect the red and black wire from the CCV-01X camera to the factory brake light wiring.
4. Run the extension cable provided towards the radio.
5. Make the power and video connections at the radio. Power the camera using the camera power output provided by the RVC interface or connect to the factory backup light wire.
6. Test the camera prior to installing the CCV-01X third brake light.
7. Adjust the camera angle as necessary.

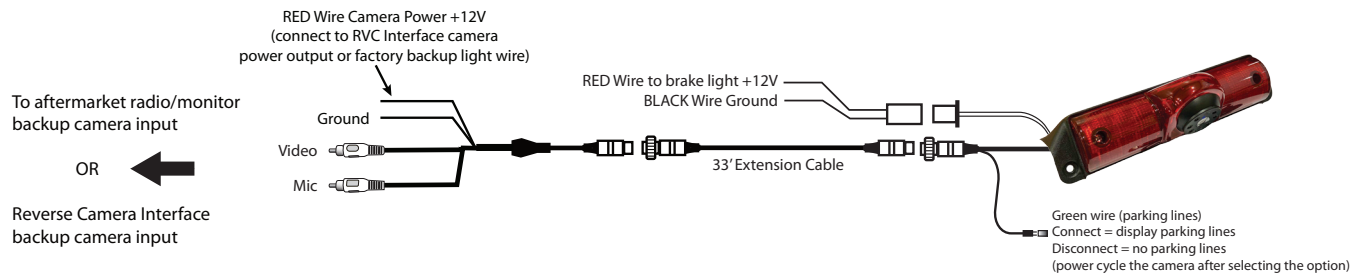

VEHICLE APPLICATIONS:

CHEVROLET

2003 - 2018 Express Van

GMC

2003 - 2018 Savana

