



FORD Tailgate Handle Camera with Moving Parking Lines and LED Light Hole for 2015 - Up F150 Trucks

# **VEHICLE APPLICATIONS:**

# **Ford**


2015 - 2018 F150

## **PRODUCT FEATURES:**

- Specially designed for the Ford F150 truck for an OEM look.
- With hole to mount OEM LED light kit. Snap cap is included to cover the hole when not used.
- 170 degree wide view angle for excellent visibility.
- With Moving Parking Guide Lines.
- Minimum illumination 0.1 lux.

## **PARTS INCLUDED:**







26 Ft. Extension Cable



Zip ties & Taps

# **INSTALLATION INSTRUCTIONS:**




1. Remove the 8 T25 Torx screws holding the liner.



2. Once the liner is removed, the top half of the sheet metal cover can easily be removed.

1/3 rev.011818








FORD Tailgate Handle Camera with Moving Parking Lines and LED Light Hole for 2015 - Up F150 Trucks



3. View with the sheet metal cover removed.



4. Remove the latch rod by pressing in the locks on the sides then pull back.

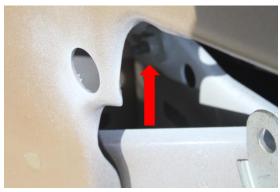

5. Remove the two 10mm nuts holding the tailgate handle.



 Carefully remove the tailgate handle assembly by lifting the handle and pulling slightly upward.
 Remove the OE lock and install it on the CFD-15KM.




7. Fish the video and power cables inside the tailgate towards the bed of the truck.



8. Run the cables through the hole on the bed and under the bed of the truck. We recommend running the cable under the passenger side of the truck bed.

2 / 3 rev.011818







FORD Tailgate Handle Camera with Moving Parking Lines and LED Light Hole for 2015 - Up F150 Trucks



Remove the OEM LED light kit and install it in the CFD-15KM camera assembly. Re-install the CFD-15KM and secure it with the 10mm nuts.




Remove the passenger tail light assembly by removing the 2 screws on the side.



11. Tap the power and ground wires of the camera cable to the reverse light wires as follows:

RED = GREEN/Black

BLACK = BLACK/Yellow

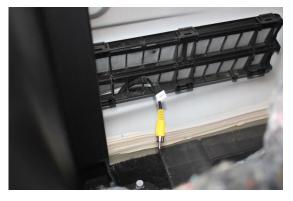

12. Run the video cable towards the front of the truck and pass through holes found between the truck bed and cabin.



13. Remove the passenger side door sill and run the cable towards the radio and plug the video RCA to the aftermarket radio or RVC Interface.



14. With the e-brake engaged, put the vehicle in reverse and check the camera functionality. If the camera image is seen on the screen, you can reinstall the tail gate sheet metal cover and bed liner.

3/3 rev.011818

