

**PRODUCT FEATURES:**

- Adds a backup camera to the factory trunk handle.
- Selectable parking guide lines ON or OFF.
- With built-in trunk release switch.
- Maintains the OEM look.

**PARTS INCLUDED:**

1. Trunk handle camera
2. 20' extension cable



**INSTALLATION INSTRUCTIONS:**



1. Remove OE trunk handle and remove the OE trunk release switch.



2. Remove the 4 screws holding the CMB-15T camera.



3. Slide the camera from the back side of the OE trunk handle.




4. Position the CMB-15T base to OE trunk handle and align the screw holes.





5. Secure the CMB-15T to the OE trunk handle using the OE screws.

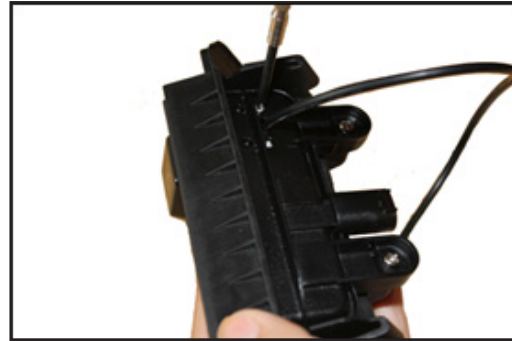


6. Put the camera back to the CMB-15T base and secure using the 4 screws.

7. Run the camera cable to the inside of the cabin towards the radio.

8. Make the power and video connections to the RVC interface or the aftermarket radio.

9. Test the camera for functionality.

10. Snap in the new trunk handle.

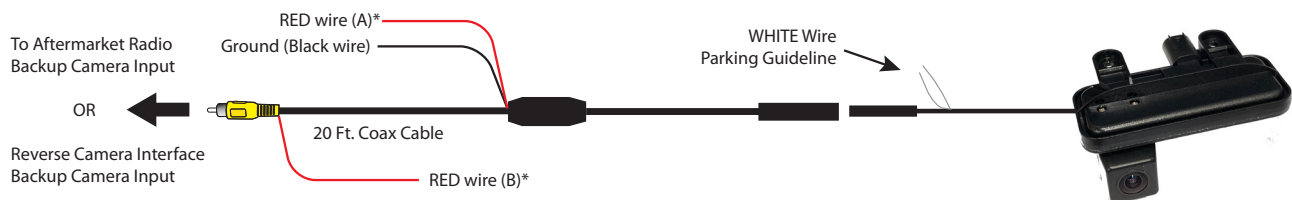

**\*NOTE:** The camera needs a +12V trigger. Power the camera at the headunit using RED Wire B or from the reverse light wire using RED Wire A. ***DO NOT*** connect both wires to +12V at the same time. Insulate the red wire that is not being used. Tap the Black wire to an existing ground lead, or ground Black wire securely to vehicle body metal.

Loop Wire Color	Function	Joined	Cut
White	Parking Lines	ON (default)	OFF

## VEHICLE APPLICATIONS:

### MERCEDES BENZ

2013 - 2017 CLA Class

