

**PRODUCT FEATURES:**

- Replaces factory trunk handle.
- Selectable Parking Guide Line ON or OFF.
- Maintains the OEM look.


**PARTS INCLUDED:**

1. Trunk handle camera
2. 20" extension cable



**INSTALLATION INSTRUCTIONS:**

1. Remove the trunk liner to gain access to the 2 screws holding the factory trunk handle.
2. Remove the trunk release switch from the factory trunk handle and install it to the CMB-17C handle.
3. Run the camera cable to the inside of the cabin towards the radio.
4. Make the power and video connections to the RVC interface or the aftermarket radio.
5. Test the camera for functionality before installing the new trunk handle with camera.

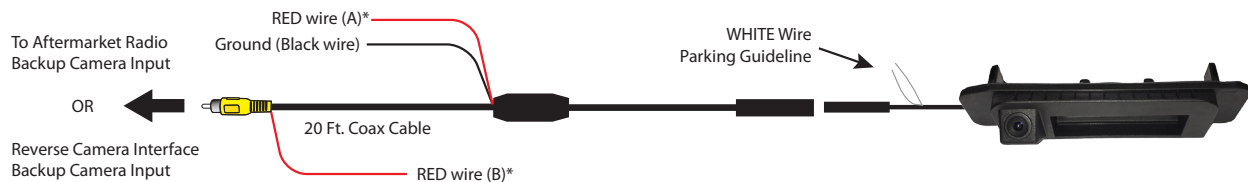

**\*NOTE:** To power the camera, use RED Wire A or B. If tapping power from the radio or RVC Interface, make sure to insulate RED Wire A to avoid it from shorting. If you will be tapping power from the reverse light +12V, insulate RED Wire B to avoid it from shorting. With either connection the Black GROUND wire needs to be connected to a solid chassis ground. For vehicles with manual transmission, we recommend tapping +12V power from the reverse light.

**WHITE Wire:** Connect to show parking guide line. Disconnect to remove. Insulate with tape to avoid from shorting.

**Note:** Cycle the camera power after connecting or disconnecting the control wire.

**VEHICLE APPLICATIONS:**

**MERCEDES BENZ**  
2015 - 2017 C300

