

PRODUCT FEATURES:

- Automatically switches to rear-view when car is in reverse gear.
- Aftermarket rear-view camera included.
- Plug & Play Installation.

PARTS INCLUDED:




RVCTY-71C T-Harness



CUB-15 Camera


INSTALLATION DIAGRAM:

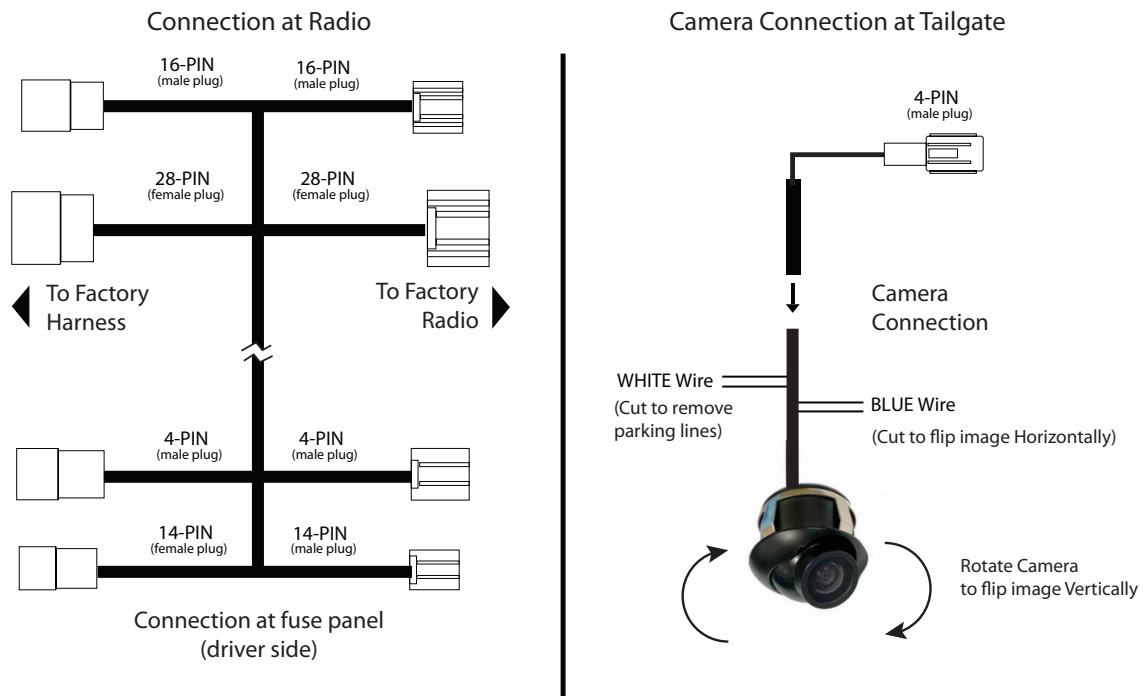

INSTALLATION INSTRUCTIONS:

INSTALLING THE CAMERA AND CABLE

1. Remove the tailgate cover.
2. Use the hole saw included in the kit and carefully drill a hole on the tailgate handle.
3. Route the camera cable through the hole but do not push in the camera yet until after testing the angle.
4. Connect the 4-Pin plug to the provided factory plug inside the tailgate. (picture #1)
5. Remove the factory radio and connect the 16-pin and 28-pin T-harness between the radio and vehicle harness. (picture #2)
6. Route the 5 foot cable and harness towards the driver side fuse panel.
7. Connect the 4-pin and 14-pin T-harness to the fuse panel connectors. (picture #3)
8. Test for camera functionality before reinstalling the radio and tailgate cover.
9. Adjust the camera angle as necessary and pop in the camera.

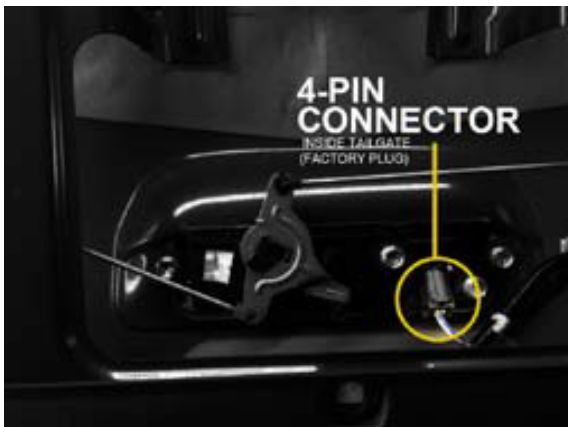

Picture #1



Picture #2



Picture #3

VEHICLE APPLICATIONS:

2012 - 2013 Toyota Tacoma

