

PRODUCT FEATURES:

- Retains factory features in select Honda vehicles while functioning with an aftermarket radio.
- Pre-programmed to retain factory Steering Wheel Controls.
- Retains factory backup camera.
- Includes antenna adapter.
- EIA color coded wiring for easy installation.

NOTES:

1. Does not support amplified systems.
2. Does not retain Rear Seat Entertainment system (RSE).
3. Does not retain factory navigation system.

PARTS INCLUDED:



SWRHN-62C MODULE



SWRHN-62C HARNESS




ANTENNA ADAPTER



SWC CABLE


INSTALLATION DIAGRAM:

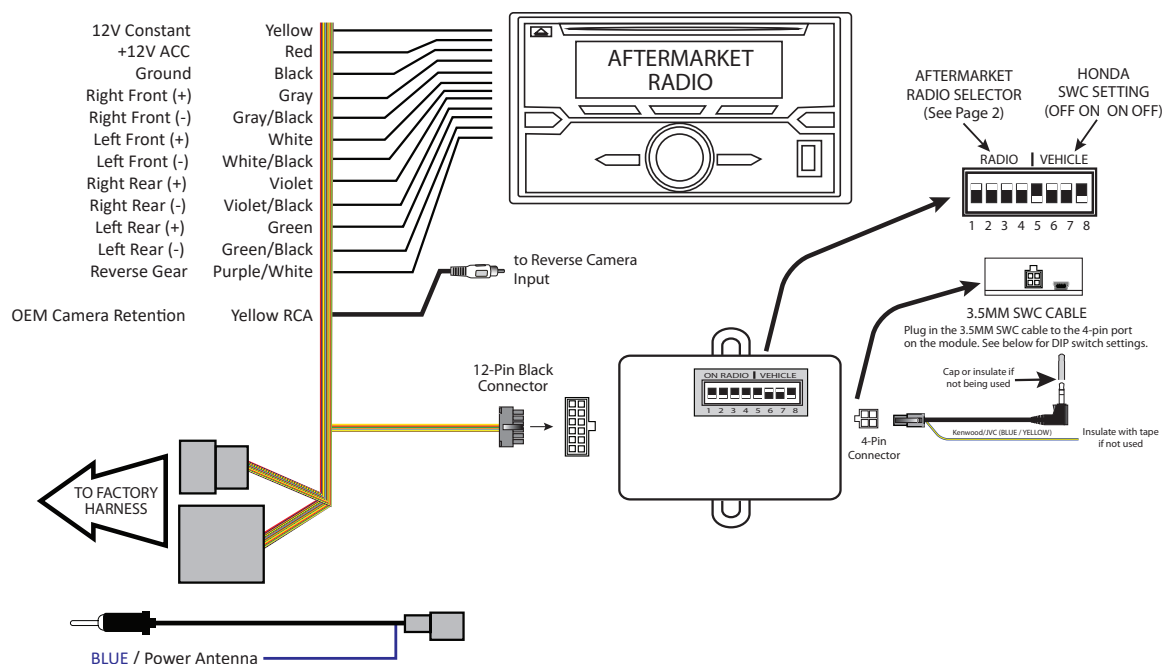

DIP SWITCH SETTINGS:

AFTERMARKET RADIO DIP SWITCH SETTINGS:


RADIO BRAND:	DIP:	1	2	3	4
Atoto, Dual, Farenheit, Jensen, Pioneer		OFF	OFF	ON	ON
Power Acoustik, Soundstream		OFF	OFF	ON	ON
Blaupunkt, Most off-brand Radios		OFF	OFF	ON	ON
Alpine		OFF	OFF	OFF	OFF
Clarion		OFF	ON	ON	OFF
Kenwood		OFF	ON	ON	ON
JVC		OFF	ON	OFF	ON
Boss, Old Sony		OFF	ON	OFF	OFF
New Sony		OFF	OFF	ON	OFF

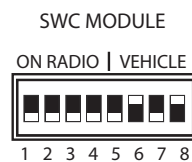

NOTE: For Atoto, Blaupunkt, Dual, Farenheit, Power Acoustik, Soundstream, and most off-brand radios, check the aftermarket radio's manual to see if the SWC buttons need to be programmed.

HONDA STEERING WHEEL CONTROL DIP SWITCH SETTING:

DIP:	5	6	7	8
Honda	OFF	ON	ON	OFF

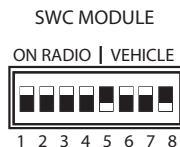

3.5MM SWC CABLE

Plug in the 3.5MM to 4-Pin SWC cable and set the DIP switches to the aftermarket radio you are using.

NOTE: Insulate the Blue/Yellow wire or 3.5mm plug if not being used.

For aftermarket radios that have wires for SWC connections, cut off the 3.5mm plug on the Crux SWC Cable and connect the SWC wires as follows:



Note that there are some radios that only have SWC1 and SWC2, in this case "shield" does not need to be connected.

INSTALLATION INSTRUCTIONS:



1. Using a plastic pry tool, remove the left and right dash trims.



2. The dash trims are held by 4 clips.





3. Carefully pull out the AC control module and unplug the connectors.



4. Remove the 2 screws holding the radio.



5. Pull out the radio.



6. Unplug the radio connectors.



7. Make the connections between the SWRHN-62C harness and the aftermarket radio harness. Plug in the backup camera RCA



8. Plug in the SWRHN-62C T-harness and the antenna adapter to the vehicle harness.

VEHICLE APPLICATIONS:

Honda
2016 – 2018 Civic / Si

