

## PRODUCT FEATURES:

- Allows the integration of an aftermarket backup camera to the factory radio.
- Plug and play wiring for easy installation.

## PARTS INCLUDED:



Frontier Tailgate Handle Camera




RVCNS-74F T-Harness



26' Extension Cable

## INSTALLATION DIAGRAM:

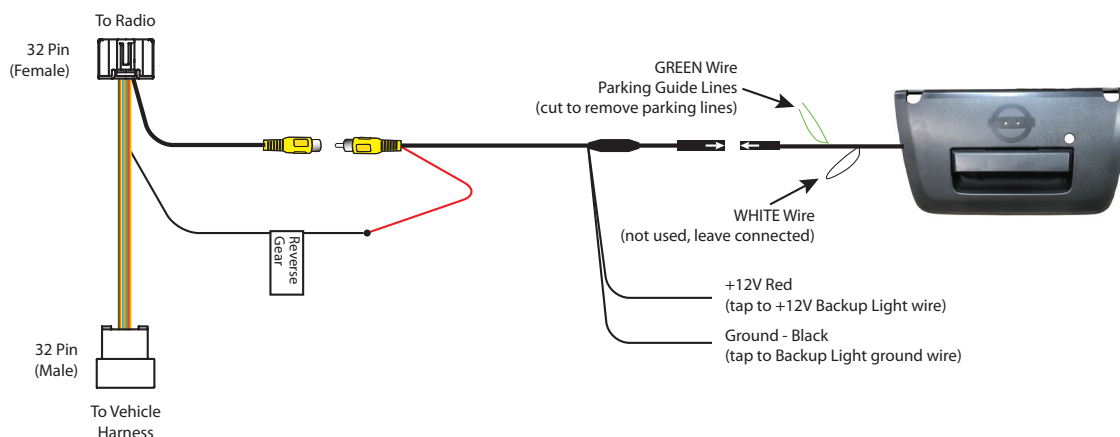

## INSTALLATION INSTRUCTIONS:

### RVCNS-74F Installation at the Radio:



1. Remove the dash panel above the radio using a pry tool.



2. Carefully pull out the radio trim bezel.





3. Use the pry tool to pull put the corners of the radio trim bezel.



4. Unplug the factory radio connector and plug it into the RVCNS-74F t-harness.

### Tailgate Handle Camera Installation:



1. Remove the screws holding the tailgate liner.




2. Use a pry tool and pull out 2 plastic rivets on both sides of the tailgate.




3. Remove the tailgate liner.



4. Remove the cover plate under the tailgate liner.

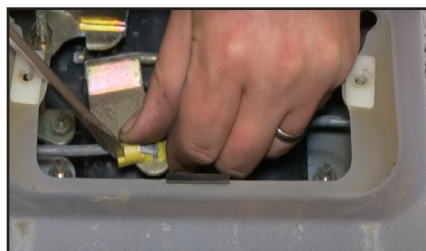

5. Use a screwdriver to remove the rod retaining clips.

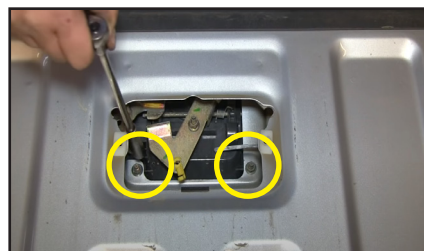

6. Remove the two 10mm nuts securing the tailgate handle.






7. Remove the factory tailgate handle assembly. Carefully remove the emblem.




8. Install the new tailgate handle camera and run the cable towards the radio. Apply glue for the emblem.




9. The emblem only goes one way. Press on it firmly and let the glue set.

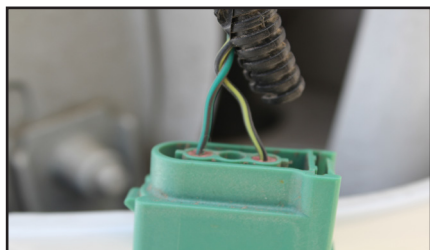

10. Tap the Red wire on the extension cable to +12V on the reverse light. Tap the black wire to ground. See diagram on page 1.

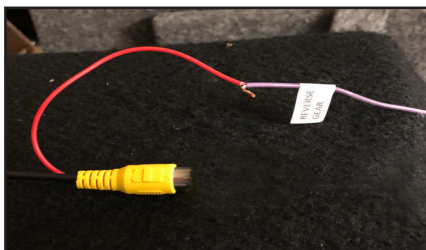

11. Tap the Red wire on the Yellow RCA connector to the wire on the T-harness labeled "Reverse Gear". See diagram on page 1.

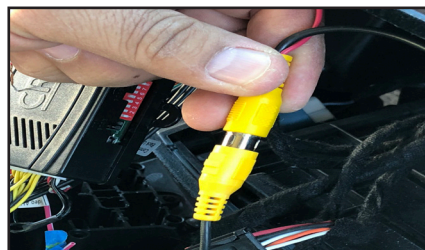

12. Plug the male RCA from the extension cable to the femal RCA on the RVCNS-74F t-harness.



13. Test the camera for functionality before re-installing the radio.

**VEHICLE APPLICATIONS:**

**NISSAN**

2013-2016 Frontier (with 4.3" screen)

**NOTE:** Not compatible in vehicles with Navigation system.

