

**PRODUCT FEATURES:**

- Retains factory features in select Honda vehicles while functioning with an aftermarket radio.
- Pre-programmed to retain factory Steering Wheel Controls.
- Retains Factory Auxiliary Input.
- Includes Antenna Adapter.
- El A color coded wiring for easy installation.

**NOTES:**

1. Does not support amplified systems.
2. Does not retain Rear Seat Entertainment system (RSE).
3. Does not retain factory navigation system.

**PARTS INCLUDED:**



SWRHN-62B MODULE



SWRHN-62B HARNESS




ANTENNA ADAPTER



SWC CABLE


**INSTALLATION DIAGRAM:**

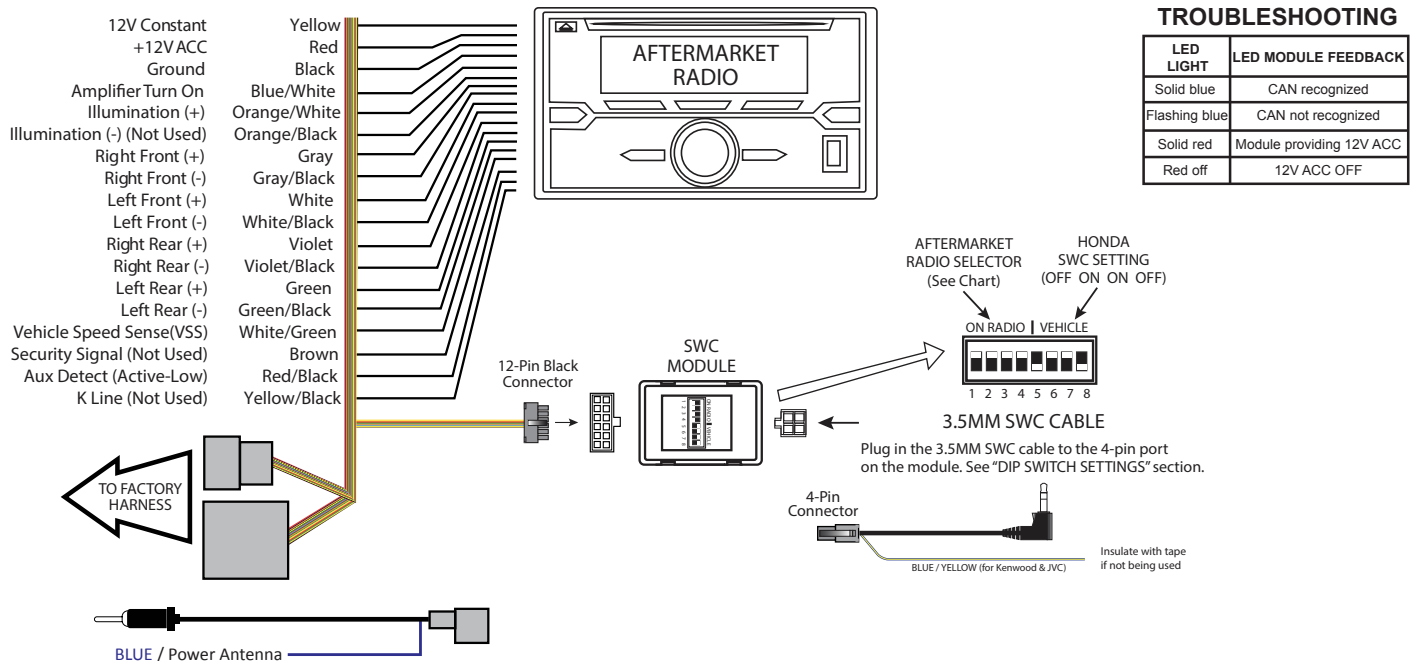

## DIP SWITCH SETTINGS:


### AFTERMARKET RADIO DIP SWITCH SETTINGS:

RADIO BRAND:	DIP:	1	2	3	4
Atoto, Dual, Fahrenheit, Jensen, Pioneer		OFF	OFF	ON	ON
Power Acoustik, Soundstream		OFF	OFF	ON	ON
Blaupunkt, Most off-brand Radios		OFF	OFF	ON	ON
Alpine		OFF	OFF	OFF	OFF
Clarion		OFF	ON	ON	OFF
Kenwood		OFF	ON	ON	ON
JVC		OFF	ON	OFF	ON
Boss, Old Sony		OFF	ON	OFF	OFF
New Sony		OFF	OFF	ON	OFF

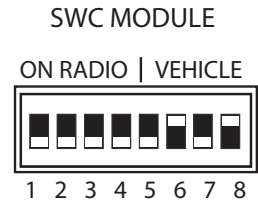

**NOTE:** For Atoto, Blaupunkt, Dual, Fahrenheit, Power Acoustik, Soundstream, and most off-brand radios, check the aftermarket radio's manual to see if the SWC buttons need to be programmed.

### HONDA STEERING WHEEL CONTROL DIP SWITCH SETTING:

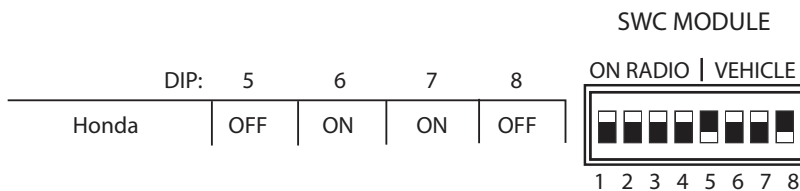

#### SWC Troubleshoot option



Located internally  
Need to take plastic  
Casing off module


- If Steering Wheel Controls don't work or work properly please switch internal dip switch from 3v3 to 5v as shown in picture above.

### 3.5MM SWC CABLE

Plug in the 3.5MM to 4-Pin SWC cable and set the DIP switches to the aftermarket radio you are using.

NOTE: Insulate the Blue/Yellow wire or 3.5mm plug if not being used.

For aftermarket radios that have wires for SWC connections, cut off the 3.5mm plug on the Crux SWC Cable and connect the SWC wires as follows:




Note that there are some radios that only have SWC1 and SWC2, in this case "shield" does not need to be connected.



**SWC RETENTION FOR VEHICLES EQUIPPED WITH FACTORY NAVIGATION**

**NOTE:** For vehicles equipped with factory navigation, you will need to tap the PINK and BROWN SWC wires (Pins 6 and 7) on the GREEN 22-Pin connector.

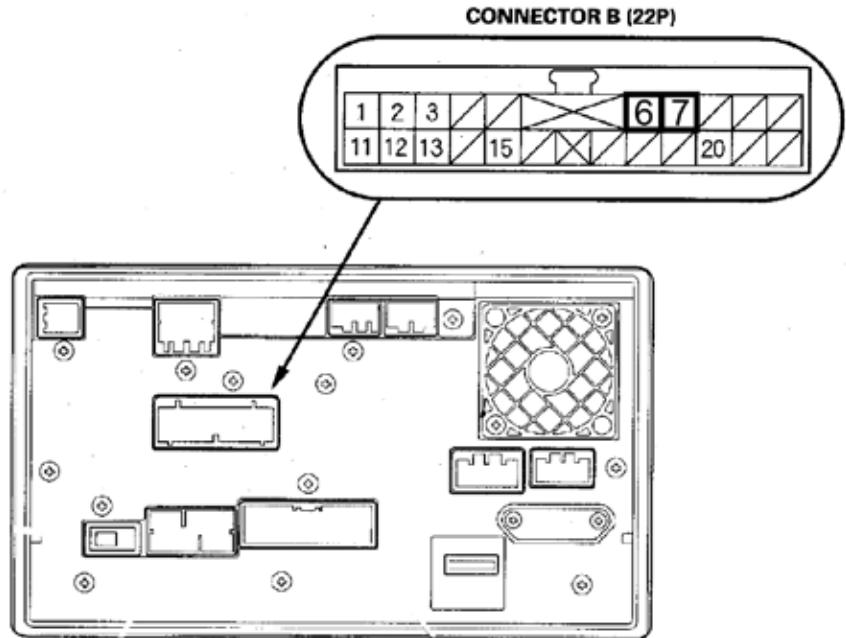

**VEHICLE APPLICATIONS:**

**Honda**

- 2006 – 2011 Civic / Si
- 2006 – 2011 CR-V
- 2010 – 2013 Insight (Non-Nav)
- 2008 – 2011 Odyssey

