



VIMCF-93E

**CHRYSLER:**

2011 - 2014 300  
2011 - 2013 Charger

## VIDEO IN-MOTION ACTIVATION FOR CHRYSLER 300 2011-2014

We recommend reading this installation guide first before starting any work. Following these instructions from "Start" to "Finish" will ensure a smooth and hassle free installation. We offer telephone support M-F 9:00 AM - 5:00PM PDT at 1 (855) 822-1348. We are here to help.

**PARTS INCLUDED:**

- (1) CF-93E Interface
- (1) CR-93E T-Harness (2598)
- (1) Instruction

**PRECAUTIONS:**

- Remove the negative side of the battery to avoid any short circuits during the installation.
- Do not install the interface near any major components or near the HVAC system. This may cause damage or overheating to the vehicle.
- **Do not disconnect the airbag connection behind the radio panel.**

**PRELIMINARY:**

Please read the entire manual before installing this interface.

**Vehicle must be equipped with factory DVD changer.**

This interface does not activate DVD reader.

**SAFETY WARNING:**

*THIS INTERFACE IS DESIGNED TO ACTIVATE VIDEO IN-MOTION TO ALLOW THE PASSENGER ACCESS TO THE ADDRESS INPUT WHILE THE VEHICLE IS IN-MOTION. THIS INTERFACE MAY CAUSE AN ERROR WHEN SERVICED AT THE OEM DEALER. BE AWARE THAT MOST DEALERS WILL ATTEMPT TO VOID THE MANUFACTURERS WARRANTY WHEN INSTALLING ANY AFTERMARKET EQUIPMENT. IMPROPER USE OF THIS INTERFACE BY THE DRIVER MAY RESULT IN CITATION. DRIVER MUST KEEP FULL ATTENTION ON THE ROAD AND RESPONSIBILITY ON THE SAFETY OF HIS PASSENGERS.*

**INSTALLING THE INTERFACE:**

1. Remove the factory radio to gain access to the factory connectors.
2. Remove the 22-Pin connector from behind the radio.
3. Make the T-Harness connections behind the factory radio.  
(if the connectors do not match please contact tech support)
4. Set the sip switches to permanently activate the VIM feature.
5. Test the Navigation address input while the car is in-motion to verify the VIM is active.

**As an option we have provided a 12v output wire from our interface, as the vehicle does not provide 12v Acc. Do not use if not needed.**

**SETTING THE DIP SWITCHES**

- Dip 1:** Activates the Video In-Motion feature. The dip switch is the permanent solution for keeping the VIM unlocked.  
Use the Green wire with a toggle switch for a non-permanent solution. (Switch not included)
- Dip 2:** If factory back-up camera is present turn to ON, otherwise OFF.
- Dip 5 & 6:** Varies, these switches are defaulted both to OFF.  
If the radio is having turn-on issues please try the following:

Attempt One: Set both 5 & 6 to the ON position.

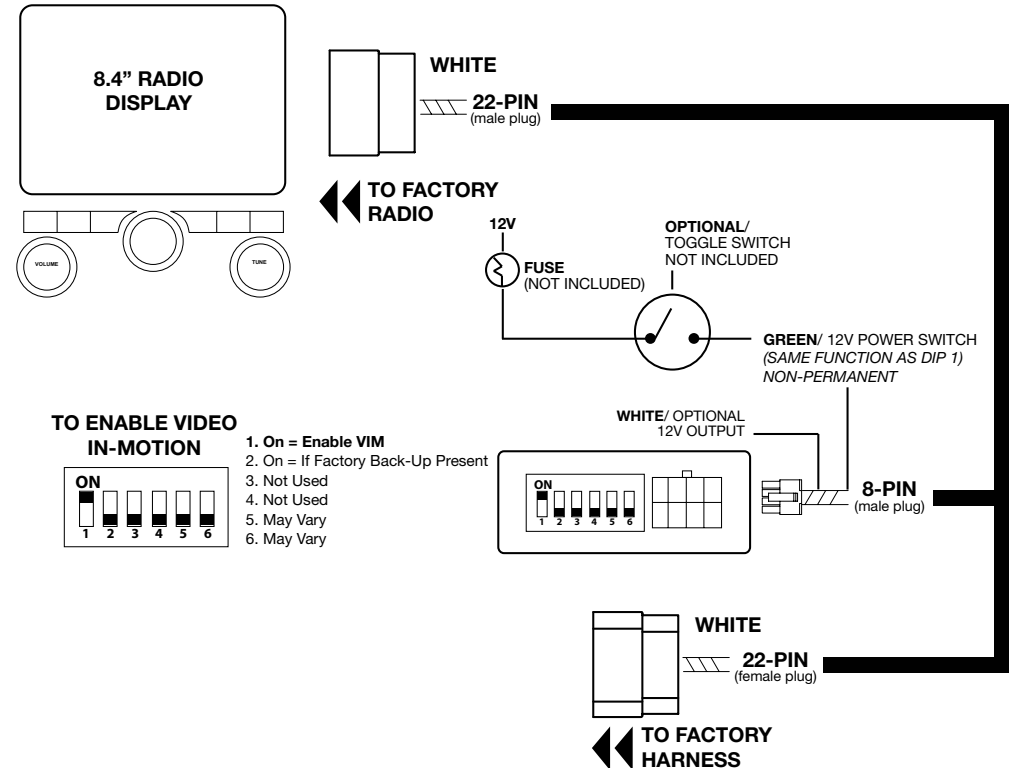
Attempt Two: Set 5 to On and 6 to OFF.

Attempt Three: Set 5 to OFF and 6 to ON.

**If none of the above solutions work out for your vehicle please contact tech support.**

**INSTALLATION OVERVIEW**

**CONNECTIONS ARE DONE  
BEHIND THE RADIO.  
NOT THE DISPLAY**

**COMPATIBLE RADIO:**

**8.4" U-CONNECT RADIO/ 2-PIECE RADIO**

**TROUBLE SHOOTING**

1. No video display while driving.  
- Make sure the dip switches are in the proper location.